
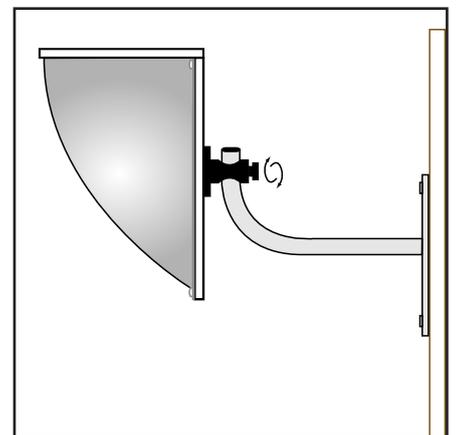
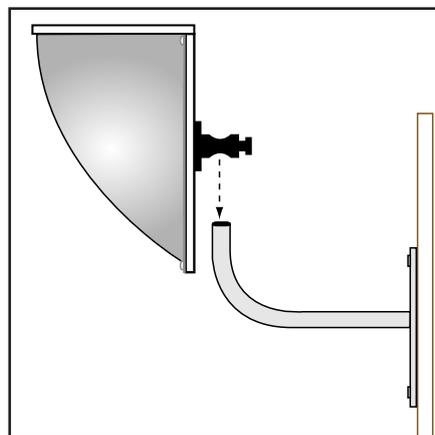
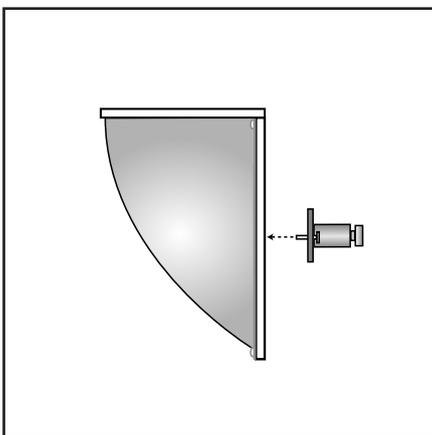
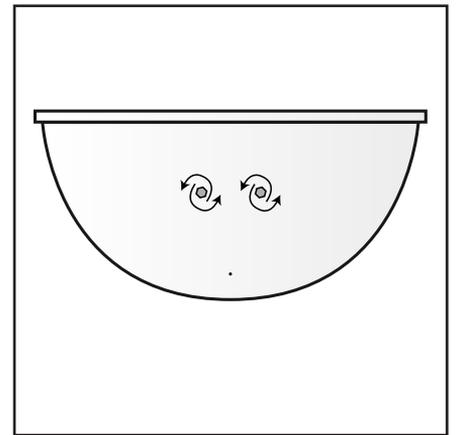
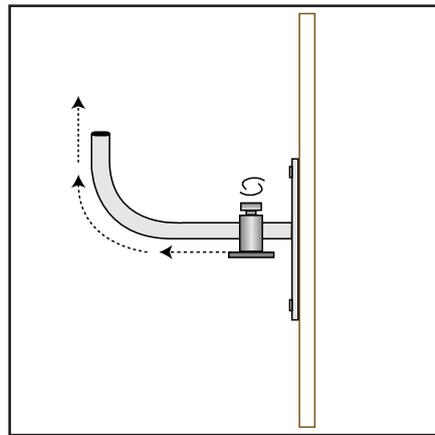


OUTDOOR HALF DOME MIRROR INSTALLATION GUIDE

1. Decide the appropriate place to site the mirror to give maximum vision.
 2. Fix J-Bracket to wall using suitable hardware, allowing enough room to get the mirror onto the J-Bracket.
 3. Slide and remove the adaptor plate from the base of the J-Bracket and set aside.
 4. Unscrew the bolts in the back of the half dome.
 5. Thread the bolts through the adaptor plate holes and screw into the the half dome back so it is securely attached.
 6. Slide the complete half dome unit with adaptor over the J-Bracket and adjust to the the desired angle.
 7. Once the mirror is in position, tighten the locking bolt on the adaptor securely.
 8. Totally remove the protective film from the mirror.
- (see next page for optional pole mounting)

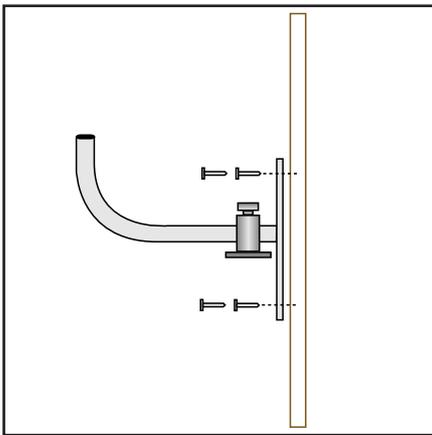

OPTIONAL U-BOLTS INSTALLATION GUIDE

1. Choose a 75mm Round pole to attach the U-Bolts to (U-Bolts not included, purchase separately).
2. Slide and remove the adaptor plate from the base of the J-Bracket and set aside.
3. Thread the U-Bolts through one side of the J-Bracket and then through both sides of the U-Bolt Flat Plate.
4. Thread the Washer and Nut onto the U-Bolts and tighten.
5. Unscrew the bolts in the back of the half dome.
6. Thread the bolts through the adaptor plate holes and screw into the the half dome back so it is securely attached.
7. Slide the complete half dome unit with adaptor over the J-Bracket and adjust to the the desired angle.
8. Once the mirror is in position, tighten the locking bolt on the adaptor securely.
9. Totally remove the protective film from the mirror.

