




## **OUTDOOR HIGH VISIBILITY MIRROR INSTALLATION GUIDE**

- 1. Decide the appropriate place to site the mirror on 75mm pole.
- 2. Fix clamp and mirror mount assembly to the pole.
- 3. Make sure adjustment slot is to the bottom
- 4. Fix the mirror to the clamp bracket.
- 5. Once the desired position has been found, tighten the bolts and nuts.
- 6. When installation is complete, remove protective film from the face.

(see next page for optional Wall Mounting Accessory)

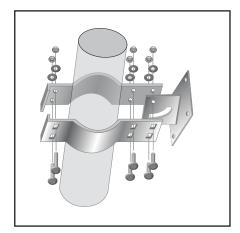

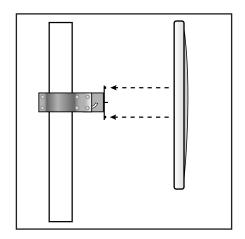

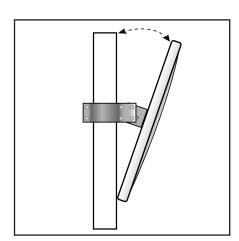


Tel: +01252 343949


Email: contact@convexmirrorshop.co.uk





## **OPTIONAL WALL MOUNTING ACCESSORY INSTALLATION GUIDE**

- 1. Decide the appropriate place to site the mirror (on a flat surface) and fix the Wall Adaptor using suitable hardware. (Wall Mounting Accessory not included, purchase seperately).
- 2. Fix the clamp and mirror mount assembly to the Wall Adaptor making sure the slot is to the bottom.
- 3. Fix the mirror face to the clamp bracket.
- 4. Once the desired position has been found, tighten the bolts and nuts.
- 5. Totally remove the protective film from the mirror.

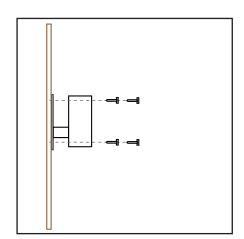

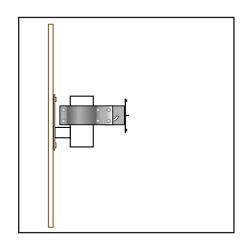

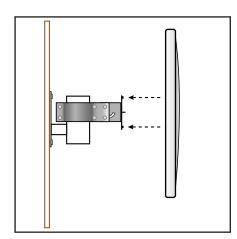

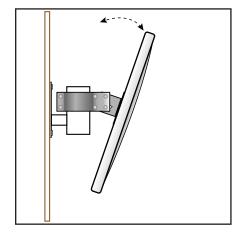

Tel: +01252 343949

Email: contact@convexmirrorshop.co.uk